

# Volkswagen Amarok

TAILGATE STRUT KIT  
Installation Instructions




Model year: 2012-2016, 2016-

Part No.: 2AB.ST.5806.1

Compatibility: all types

Weight: 1 kg

Installation time: 30 min

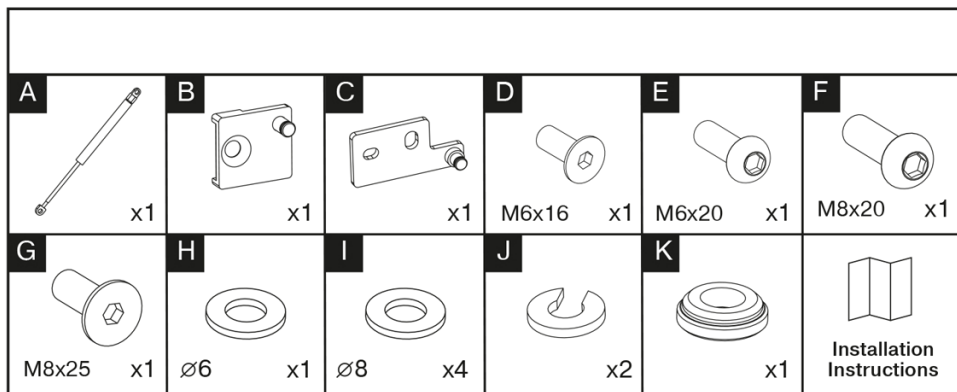

### Required Tools

